


eMotion™ Motion-Activated Essential Oil Diffuser - INSTRUCTIONS

PARTS

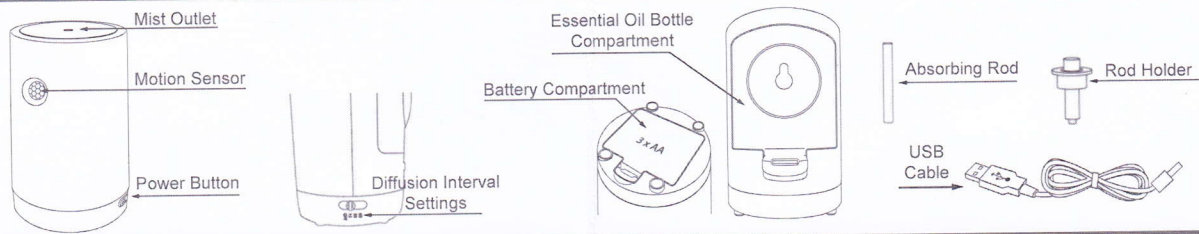

FEATURES

Motion-sensing technology takes aromatherapy to a whole new level. eMotion's neutral appearance matches any style of décor.

- Measures 5.2"H x 3.4"D
- Includes empty 10 mL glass bottle
- Fits a 10 mL bottle of essential oil
- Includes 5 unscented, replaceable Absorbing Rods with 1 Rod Holder
- Coverage Area: Up to 200 sq ft
- Detectable Motion Sensor Range: Up to 9 ft, 120° angle
- Wall-mount option conserves counter space
- Operation Mode: 5-minute cycle with ultrasonic mist intervals at 15, 30, or 60 seconds
- Standby Mode: Following a 5 minute operation cycle, **device will not diffuse for 5 minutes (waiting period)**. Then it enters standby mode, reactive to motion, triggering another operation cycle.
- Power: USB power cord (included) or 3 AA batteries (not included)

CARE & MAINTENANCE

WARNING:
Essential oil should not come in contact with the exterior surface of the unit. Disconnect USB Cable when not in use. Only use the power cord supplied with the unit. Always remove the power cord before cleaning.

TO CLEAN:
We recommend cleaning the diffuser once a week.

To remove possible buildup, gently use a cotton swab dipped in white vinegar to wipe out the inside of the diffuser.

Dry with a soft cloth to avoid mineral buildup.

Do not use strong cleaning agents.

INSTRUCTIONS FOR USE

1. Insert 3 AA batteries into the Battery Compartment under the base of the diffuser respecting polarity indications. If using the USB Cable, insert the DC connector into the DC jack located on the side of the unit. Then plug USB into USB port on any device.
2. Remove oil bottle cap. Insert new plastic Rod Holder into neck of essential oil bottle, pushing down into place. Insert Absorbing Rod through Rod Holder until the rod touches the bottom of the bottle. Note: When finished diffusing, remove used Absorbing Rod and Rod Holder from essential oil bottle to discard or store for later use.
3. Open the Essential Oil Bottle Compartment in the back of the diffuser and insert the bottle of essential oil with its Absorbing Rod. When placing bottle into eMotion, first insert bottom of the bottle using the retractable platform. Replace compartment cover before use.
4. **Power Button Cycles:**
Slide the Power Button to the right to select your choice of diffusion.
 - **15 Seconds:** An immediate puff will diffuse, and then will restart every 15 seconds for 5 minutes. The diffuser will not puff again until motion is detected. The device will then restart to puff every 15 seconds for another 5-minute cycle.
 - **30 Seconds / 60 Seconds:** Same cycle every 30 / 60 seconds for 5 minutes until motion is detected.

Once 5 minute operation cycle ends, device enters 5 minute waiting period and then resumes standby mode, reactive to motion.

To turn the diffuser off, slide the Power Button to the left OFF position.

NOTES:

- We recommend using COMMAND™ hooks to mount the diffuser onto the wall.
- Replace Absorbing Rod when changing fragrance or after extended use. To store used rods, place in an airtight container or resealable plastic bag.
- Purchase additional Absorbing Rods and Rod Holders at sparoom.com.

